



We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-888-996-2729

FAX: 1-866-873-3531

gameroom@escaladesports.com

Or write to:

Escalade Sports

Customer Service Department

P.O. Box 889

Evansville IN 47706

Please visit our Web site at:

www.escaladesports.com

Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable) and part number if requesting a replacement part. These numbers are located on the product, packaging, and this owners manual.


Your Model Number AL1010W/F

Date Code 2 - AL1010W- - SY

Purchase Date _____

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**

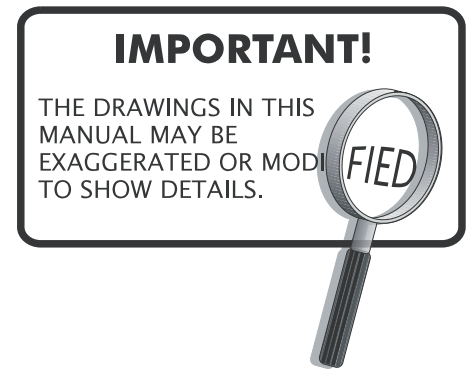

TWO ADULTS ARE REQUIRED TO ASSEMBLE THIS 84" KIRKWOOD AIR HOCKEY TABLE

Tools Required:

- Socket Head Wrench (Included)
- Furniture Polish and Cloth
- Small Phillips Screw Driver to Install Batteries In the Battery Box

An electric screwdriver is helpful in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.

Assembly Tips

Make sure you understand the following tips before you begin to assemble your hockey table.

1. Start all bolts by hand before tightening.
2. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.




ATTENTION:

**READ AND FOLLOW ALL ASSEMBLY, OPERATION, AND
SAFETY INSTRUCTIONS CAREFULLY. AT LEAST TWO
ADULTS ARE NEEDED TO ASSEMBLE THIS TABLE.**

HARDWARE IDENTIFIER (To Scale)




H1 - 8mm x 130mm Hex Head Bolt
(8 pcs)

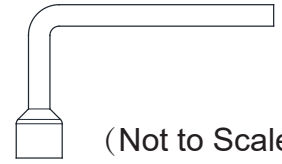


(Not to Scale)

 T1 - Socket Head Wrench
(1 pc)



H2 - 8mm x 40mm
Hex Head Bolt
(20 pcs)

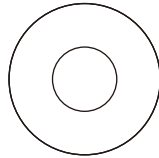


H3 - M8 Flat Washer
(28 pcs)




H4 - M8 Lock Washer
(28 pcs)


PARTS IDENTIFIER (Not to Scale)

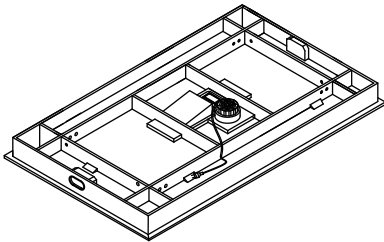


P1 - Main Cabinet
(1 pc)

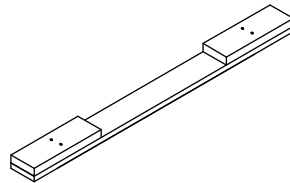


P2 - Leg Base
(2 pcs)

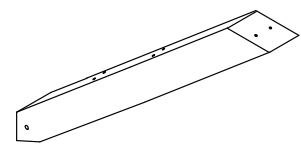

P3 - Middle Leg
(2 pcs)

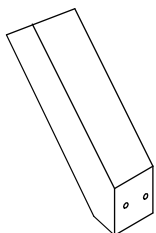


P4 - Upper Leg
(2 pcs)

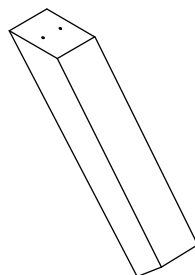

P5 - Bottom Leg
(2 pcs)

 ACCESSORIES IDENTIFIER (Not to Scale)



A1 - Striker
(2 pcs)



A2 - Puck
(2 pcs)



A3 - Felt Pad
(2 pcs)

NOTE: A3 Felt Pads may already be attached to A1 Strikers

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

"CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

Assembly Note:

In the following Steps 1 , 2 , & 3 , please exercise patience when starting all H1 & H2 bolts . Be sure to align bolts straight with their respective holes . Be careful not to cross thread .

Do not push on the bolts while trying to get the bolts to start as you could accidently push the inner T-Nut out of it fixed position .

PARTS REQUIRED

1pc - **P1** Main Cabinet
 2pcs - **P3** Middle Leg
 2pcs - **P4** Upper Leg

12pcs - **H2** Hex Head Bolt
 12pcs - **H3** Flat Washer
 12pcs - **H4** Lock Washer

STEP 1

Attach the **P4** Upper Leg, **P3** Middle Leg onto the **P1** Main Cabinet using the **H2** Hex Head Bolts, **H3** Flat Washers and **H4** Lock Washers as shown in **FIGURE 1**.

Do not tighten H2 bolts at this time. Tighten when K-leg assembly is completed.

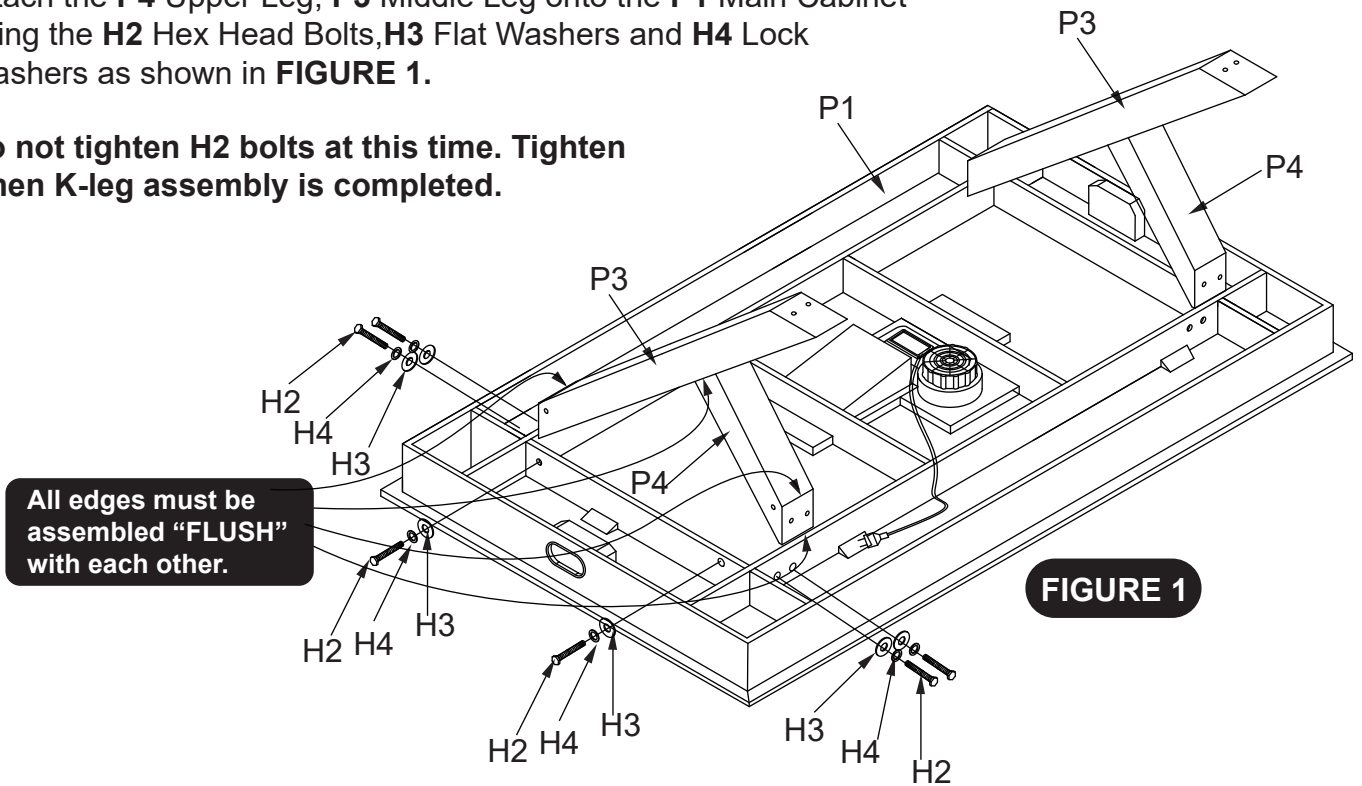


FIGURE 1

PARTS REQUIRED

2pcs - **P5** Bottom Leg
 8pcs - **H1** Hex Head Bolt

8pcs - **H3** Flat Washer
 8pcs - **H4** Lock Washer

STEP 2

Attach the **P4** Upper Leg with **P3** Middle Leg using the **H1** Hex Head Bolts, **H3** Flat Washers and **H4** Lock Washers as shown in **FIGURE 2**.

Attach the **P5** Bottom Leg onto the **P3** Middle Leg using the **H1** Hex Head Bolts, **H3** Flat Washers and **H4** Lock Washers as shown in **FIGURE 2**.

Do not tighten H3 bolts at this time. Tighten when K-leg assembly is completed.

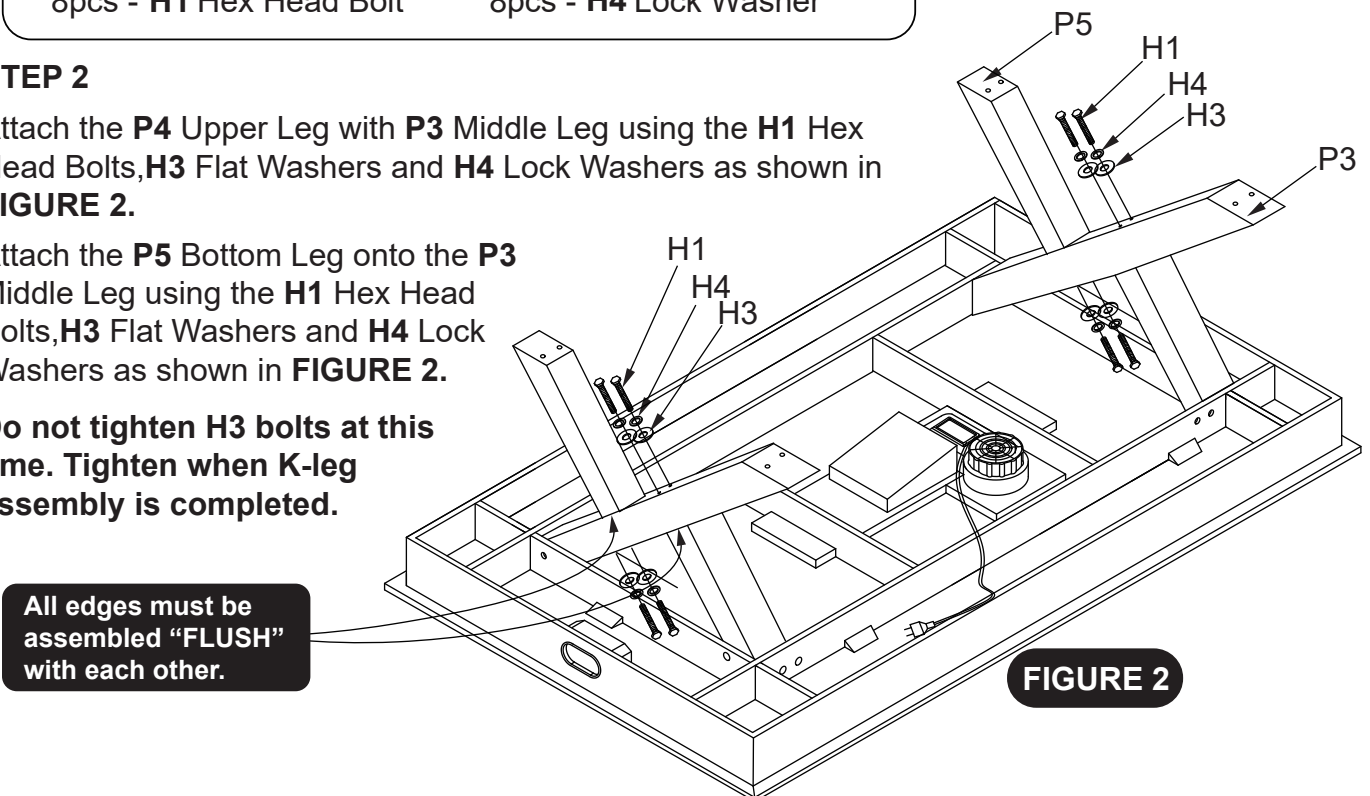


FIGURE 2

PARTS REQUIRED

2pcs - **P2** Leg Base
8pcs - **H2** Hex Head Bolt


8pcs - **H3** Flat Washer
8pcs - **H4** Lock Washer

STEP 3

Attach the **P2** Leg Base onto the **P3** Middle Leg and **P5** Bottom Leg using the **H2** Hex Head Bolts, **H3** Flat Washers and **H4** Lock Washers as shown in **FIGURE 3**.

Tighten all leg bolts now using the **T1** Socket Head Wrench-tight.

FIGURE 3

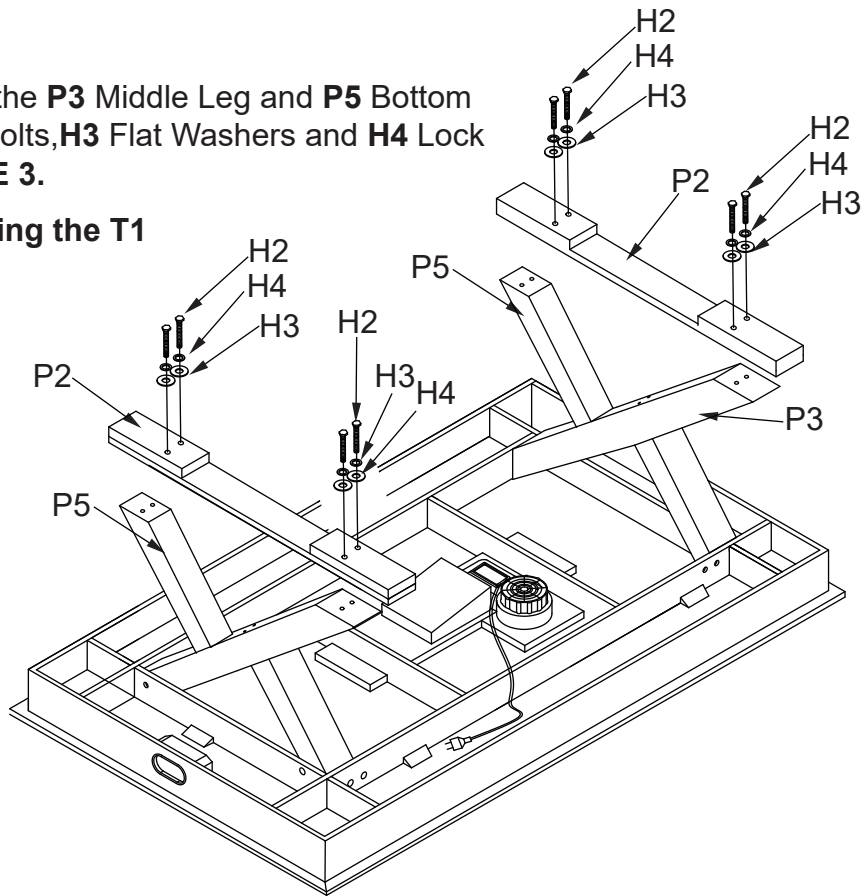


WARNING:


THIS STEP REQUIRES FOUR OR MORE ADULTS.

WHILE FLIPPING THE TABLE OVER, DO NOT ALLOW TABLE TO REST ON THE SIDE OF LEGS AS THIS COULD DAMAGE THEM.

VERY CAREFULLY TURN THE TABLE OVER AND SET IT ON ITS LEGS. BE CAREFUL. THE TABLE IS VERY HEAVY.



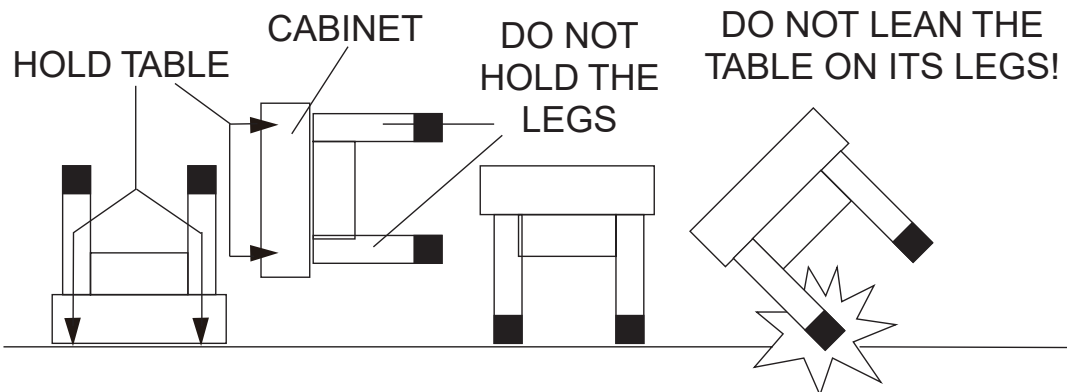


ELECTRONIC CONNECTIONS

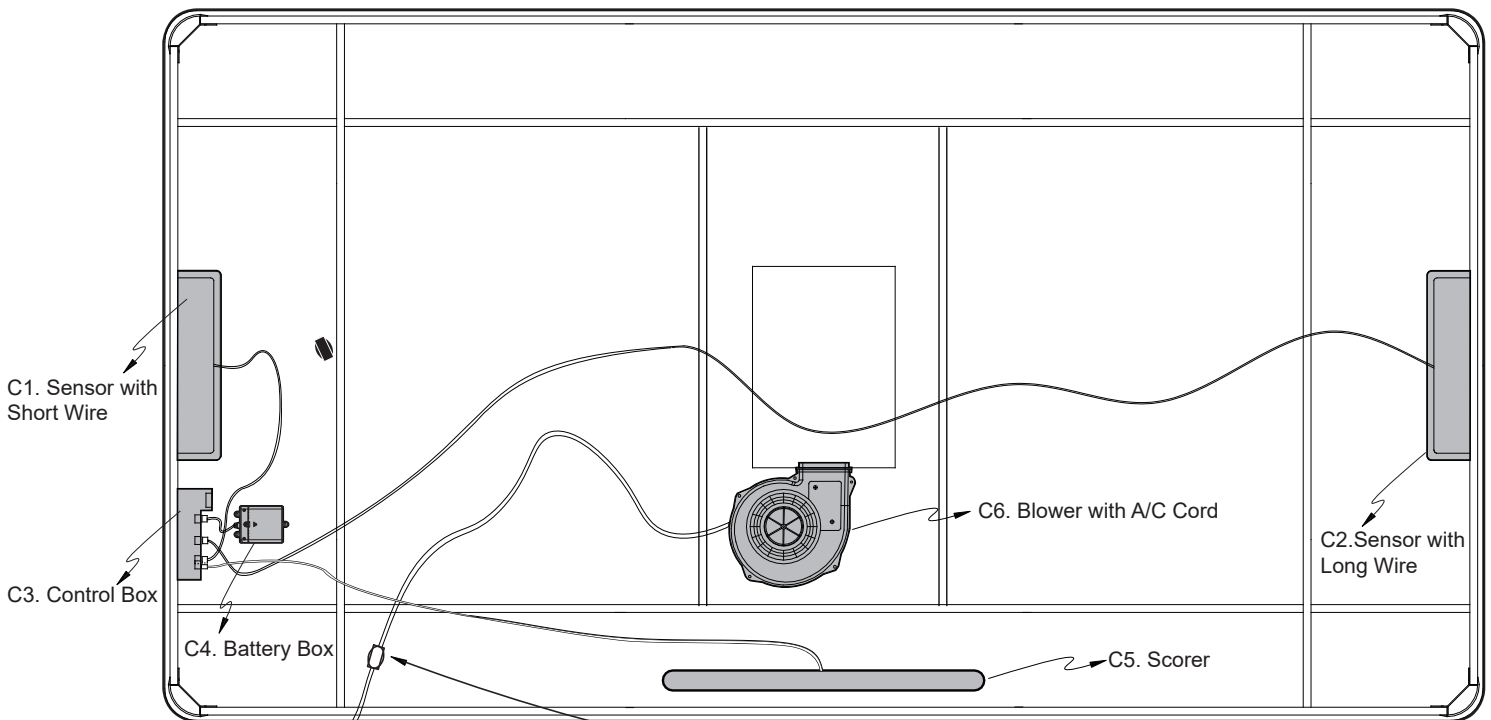


IMPORTANT:
 Plug into wall outlet.
 Do not allow cord to be a trip hazard.

NOTE:
 ON/OFF switch is attached to the air fan motor cord. Be sure to always turn fan motor off when play is completed.

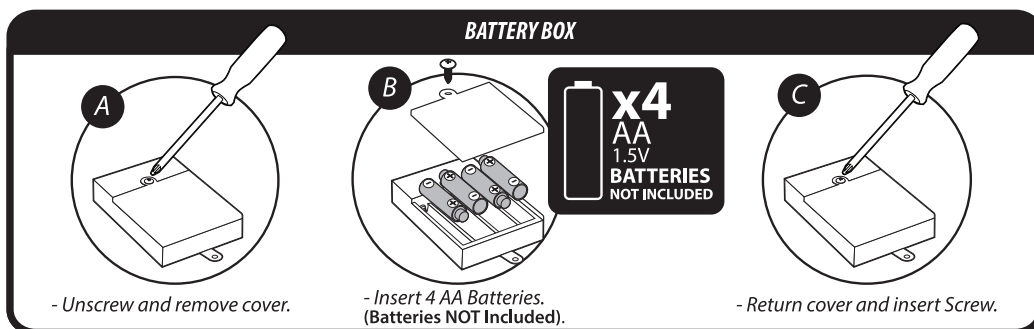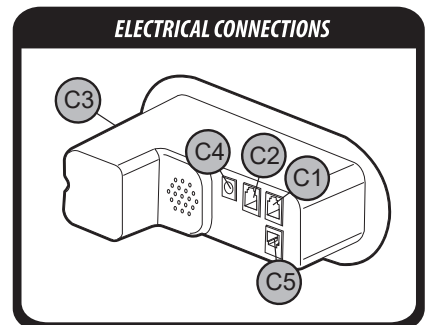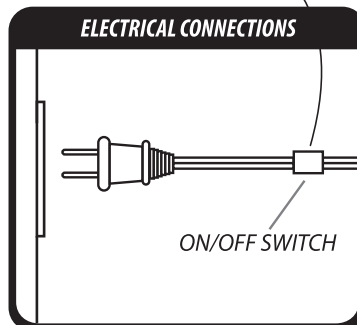

LED SCORING OPERATING

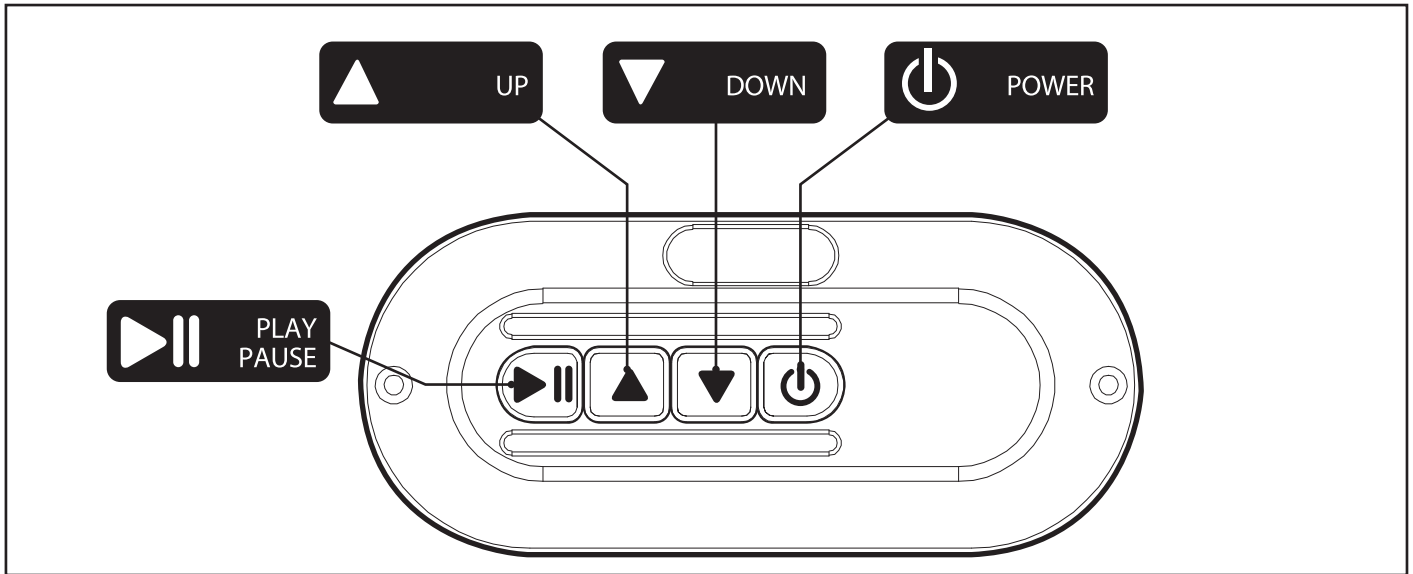



SCOREBOARD OPERATION


POWER

Press the **POWER** button  to turn the scoreboard ON.

SELECT PLAYING TIME

Press the **UP**  or **DOWN**  button to scroll through the playing time options.

- 3 Minutes
- 5 Minutes
- 7 Minutes
- 10 Minutes
- Tug of War (Each goal scored moves the LEDs towards the scoring player. First player to reach 11 wins!)
- Free Play (no time limit)

Press the **PLAY** button  to select the current time and begin playing the game.

SOUND

During game play, press the **UP**  or **DOWN**  buttons to adjust the volume level.

TIMEOUT

Press the **PLAY** button  during game play to pause the clock and take a timeout.

RESET

After the game is over, press any button (Except the **POWER** BUTTON) to **RESET** the scoreboard.

Press and hold any button (Except the **POWER** BUTTON) for 3 seconds to **RESET** the scorer at any time.

Congratulations! You have now assembled your table. Please note the Care and Use instructions below to insure many years of trouble free use of your game table.

CARE AND USE OF YOUR TABLE

1. Use spray furniture polish to clean all exterior surfaces of your table and on the playfield with the air motor running.
2. Use only a suitable 120v AC household outlet, and insure the cord is not a trip hazard.
3. This product is intended for **INDOOR** use only.
4. **DO NOT** sit, climb or lean on the table.
5. **DO NOT** drag the table when moving it. This will damage the legs.
6. **DO NOT** set drinks on the table.
7. The purchase of a table cover will both protect and help keep clean the entire top of the table.

PRODUCT PARTS LIST FOR MODEL # AL1010W/F

Key #	Part #	Description	Qty.
H1	AL1010STXH1	8mm x 130mm Hex Head Bolt	8
H2	AL1010STXH2	8 mm x 40 mm Hex Head Bolt	20
H3	AL1010STXH3	M8 Flat Washer	28
H4	AL1010STXH4	M8 Lock Washer	28
T1	AL1010STXT1	Socket Head Wrench	1
P1	AL1010STXP1	Main Cabinet	1
P2	AL1010STXP2	Leg Baseplate	2
P3	AL1010STXP3	Middle Leg	2
P4	AL1010STXP4	Upper Leg	2
P5	AL1010STXP5	Bottom Leg	2
A1	AL1010STXA1	Striker	2
A2	AL1010STXA2	Puck	2
A3	AL1010STXA3	Felt Pad (may be attached)	2
C1	AL1010STXC1	Sensor with Short Wire	1
C2	AL1010STXC2	Sensor with Long Wire	1
C3	AL1010STXC3	Control Box	1
C4	AL1010STXC4	Battery Box	1
C5	AL1010STXC5	Scorer	1
C6	AL1010STXC6	Blower with A/C Cord	1
C7	AL1010STXC7	Corner Cap	1
K1	AL1010STXK1	Hardware Kit	1
M1	AL1010STXM1	Owner's Manual	1

90 DAY LIMITED WARRANTY

This customer warranty extends to the original owner, on the purchase of any ESCALADE SPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original owner, for a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original owner, this product to be free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY REPLACEMENT: During the above 90 day warranty period, ESCALADE SPORTS shall provide replacement components or replace with a comparable product at our choosing. If product is defective under normal use and proper care, please contact our Customer Service Dept.

1-888-996-2729 / Customer Service Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Customer Service Dept.

Or E-mail us at:

customerservice@escaladesports.com

Other than shipping requirements no charge will be made for such replacement of in-warranty Products.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.