

# Arcade Style Electronic Dartboard

**Arachnid**<sup>®</sup>  
*The Originator of Electronic Dart Games!*

[www.escaladesports.com](http://www.escaladesports.com)

TO ORDER PARTS

Visit our website before returning to store

## **⚠ WARNING**

This is not a toy and is intended for use by or under the supervision of adults. Darts should only be thrown at the dart board. Ensure the flight path is clear of people or pets when playing this game. Impact from darts could cause physical harm, injury or property damage. Don't throw damaged darts.

**Please have your model number  
when inquiring about parts.**

When contacting Escalade Sports please provide your model number, date code (if applicable), and part number if requesting a replacement part. These numbers are located on the product, packaging, and in this owner manual.

Your Model Number: **E800FS1010**

Date Code: **CPSIA#2-E800FS1010-** **-MW**

Purchase Date: \_\_\_\_\_

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

817 Maxwell Ave. Evansville, IN 47711 / [www.escaladesports.com](http://www.escaladesports.com)





## **IMPORTANT NOTES**

1. Make sure you have all the necessary parts before beginning each assembly step.
2. Perform the assembly steps exactly as written to avoid errors.
3. Refer to diagrams to aid in the assembly process.
4. Keep your original receipt and instruction manuals for the cabinet and electronic dartboard for warranty purposes.
5. This is a 2 adult assembly



### **Tools Needed**

- Phillips Screwdriver

## **PREPARATIONS**

1. Find an open area on the floor to perform the assembly, in close proximity to where you plan to put the finished product.
2. Carefully open the box. Do not use a knife as you may scratch the cabinet.
3. Remove the inner box holding the electronic dartboard and put it to the side until you are ready to install it into the cabinet.
4. Take the cabinet and hardware parts out of the box and make sure all of the parts are accounted for.
5. Begin assembly.

## **WARNING!**

### **TIP OVER HAZARD**

Do NOT lean on or climb on this cabinet.

Hand pressure must be applied to the dartboard while removing darts from the dartboard.  
A Safety L-Bracket / Screws / and installation Instructions are included and must be installed correctly in order to prevent this tip over hazard.



### **PLEASE KEEP YOUR INSTRUCTIONS!**

- Your Model number is necessary should you need to contact us.
- Please read through this instruction book to familiarize yourself with all the parts and assembly steps.
- Refer to the Parts Identifier and verify that all parts have been included.
- For questions that may arise or for missing parts,  
**PLEASE CONTACT US BEFORE RETURNING THE PRODUCT TO THE STORE**



### **CONTACT INFORMATION:**

 
**Hours:** Mon. - Fri., 9:00 am to 5:00 pm EST

**Replacement Parts:** order online at [www.escaladesports.com](http://www.escaladesports.com)

**Technical Support:** [customerservice@escaladesports.com](mailto:customerservice@escaladesports.com) /  
1-800-526-0451




# Hardware Identifier (To Scale)



H1 - 40 x 5mm  
Phillips Flat Head Bolt (24)



 
H2 - 25 x 6mm  
Panel Bolt (4)

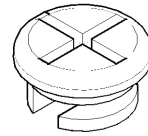

(Not to Scale)  
H3 - Panel Bolt Lock (4)



 
H4 - 20 x 6mm  
Wood Dowel Pin (16)




H5 - 18 x 6mm  
Allen Head Bolt (2)



 
H7 - 16 x 5mm  
Pivot Pin (2)

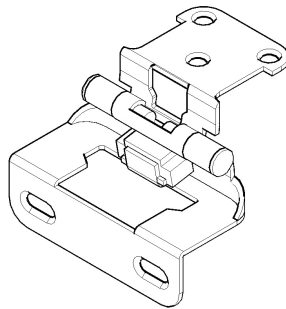

(Not to Scale)  
H8 - Door Hinge (3)

 

 H9 - 12 x 3.5mm  
Phillips Round Head Screw (56)

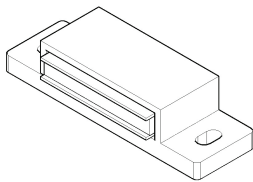


(Not to Scale)  
H10 - Door Magnet (1)




H11 - (Not to Scale)  
Door Magnet Attachment (1)



 
H12 - 10 x 3.5mm  
Phillips Flat Head Screw (5)

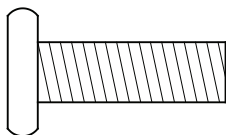

H13 - 25 x 8mm  
Allen Head Bolt (4)

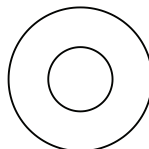 


H14 - 8.5 x 19mm  
Flat Washer (4)

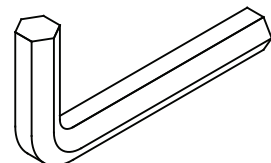 


(Not to Scale)  
Allen Wrench (1)




# Parts Identifier (Not to Scale)

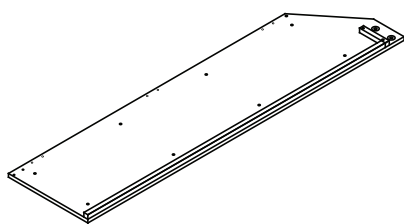 

 
**A** - 120 x 30cm  
Lower Left Side Panel (1)

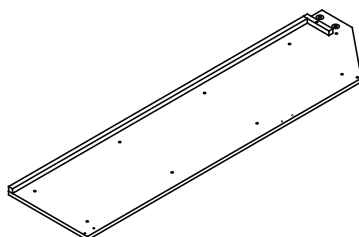

 
**B** - 120 x 30cm  
Lower Right Side Panel (1)

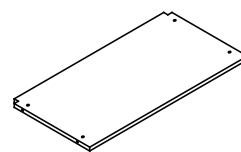

 
**C** - 57.5 x 29.5cm  
Top & Bottom Shelves (2)

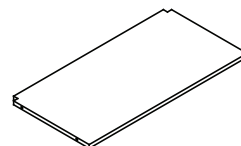

 
**D** - 57.5 x 29cm  
Middle Shelves (2)

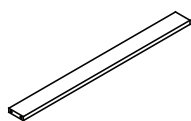

 
**E** - 57.5 x 5cm  
Base Cross Panel (1)

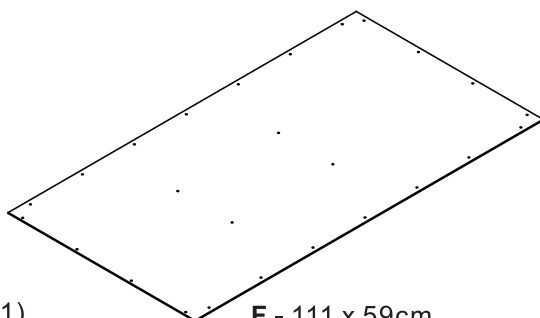

 
**F** - 111 x 59cm  
Lower Back Cover (1)

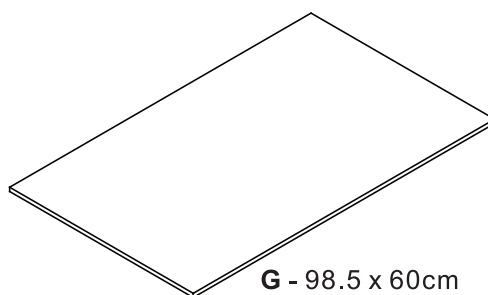


**G** - 98.5 x 60cm  
Door Panel (1)

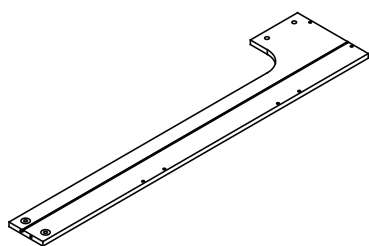 

 
**J** - 98 x 21.5cm  
Upper Left Side Panel (1)

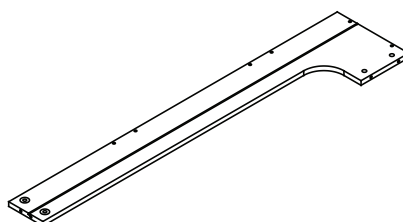

 
**K** - 98 x 21.5cm  
Upper Right Side Panel (1)

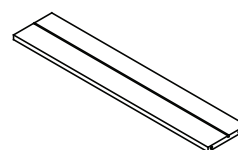

 
**L** - 57.5 x 11.5cm  
Upper Section Bottom Panel (1)

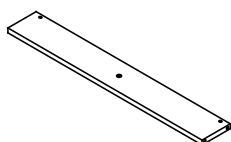

 
**M** - 55 x 8cm  
Dartboard Anchor Panel (2)

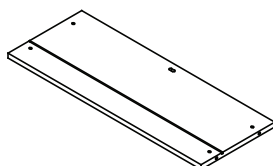


**N** - 55 x 21cm  
Upper Panel (1)

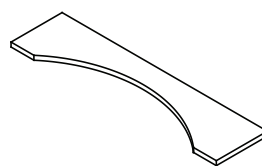 

 
**P** - 58 x 14.5cm  
Upper Section  
Arched Front Panel (1)

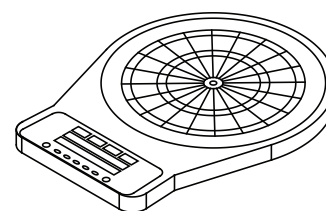


**Q** - Dartboard (1)

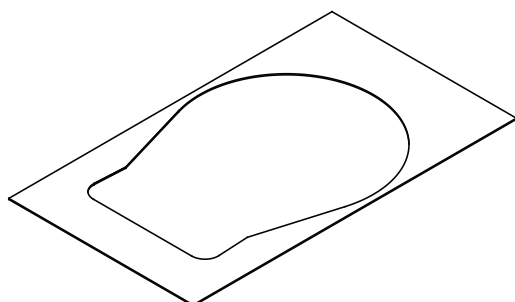 

 **R** - 97.5 x 55.5cm  
Front Baffle Panel (1)

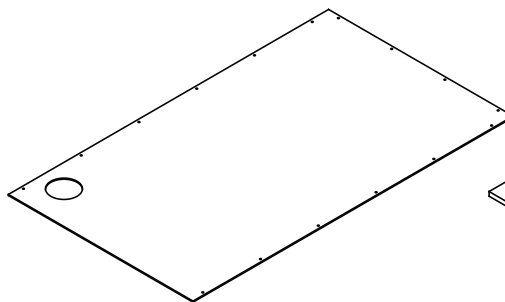

 
**S** - 98 x 56.5cm  
Upper Back Panel (1)

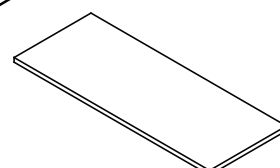


**T** - 57 x 22.5cm  
Tilt-Down Door Panel (1)



 1. Attach Parts **N** and **L** to Part **J** using Phillips Flat Head Bolts (**H1**). See **Figure 1**. Factory Installed Inserts on Part **N** and Part **J** must be aligned to screw holes for proper attachment. See **Figure 1A**. Make sure grooves on all parts are aligned. Tighten, but do Not over tighten or strip out **H1** Bolts.

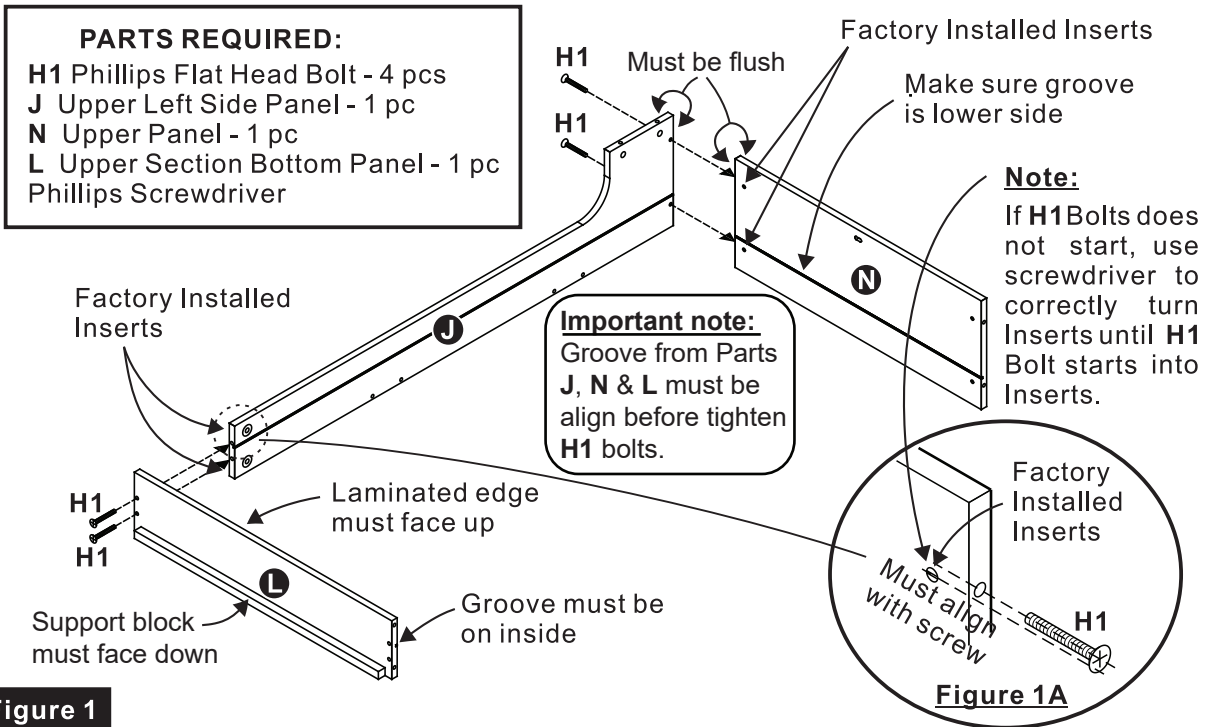

 2. Screw Allen Head Bolts (**H5**) into Factory Installed Inserts on Parts **M**. Finger tighten Only.
3. Attach Parts **M** to Part **J** using Phillips Head Bolts (**H1**) and Wood Dowel Pins (**H4**). See **Figure 2**. Tighten, but do Not over tighten or strip out **H1** Bolts.

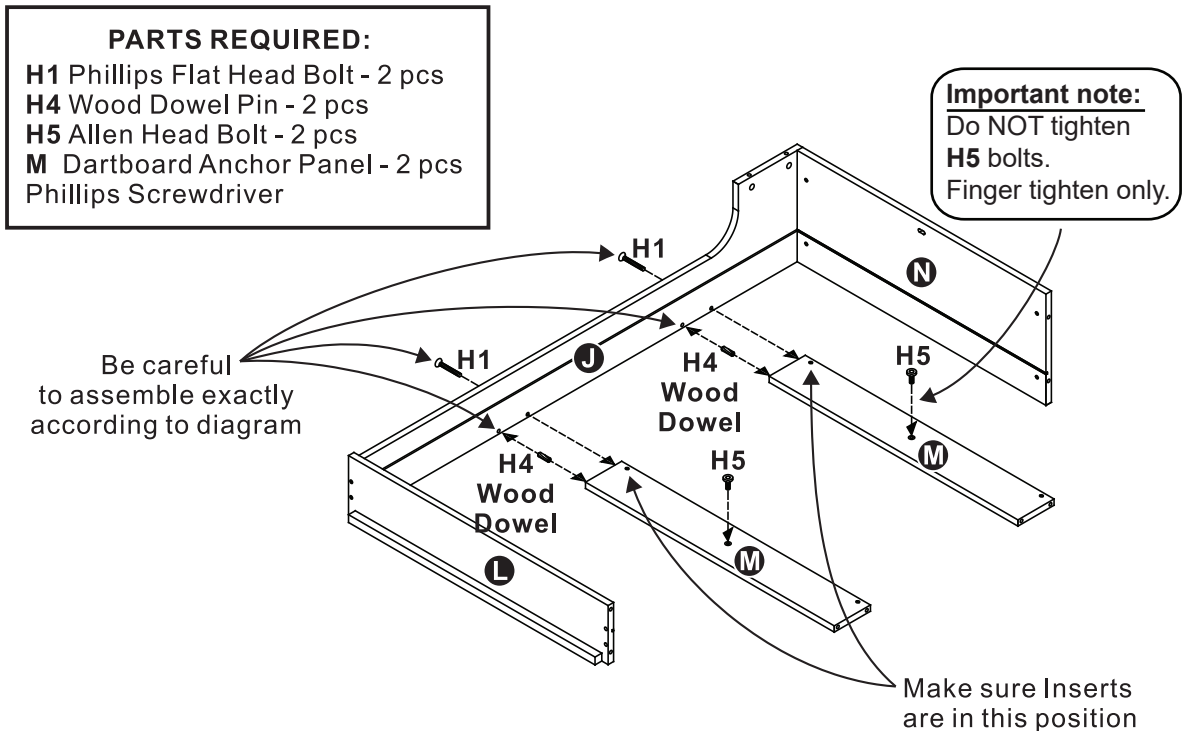




4. **Important Note: This step requires help from another adult.**  
Hang **Dartboard (Q)** on Parts **M**.
5. **Important Note: This step requires help from another adult.**  
Slide Part **R** into grooves on Parts **N**, **L** and **J** and over **Dartboard** until board shows through cut out piece.

**PARTS REQUIRED:**

 **Q** Dartboard - 1 pc  
**R** Front Baffle Panel - 1 pc

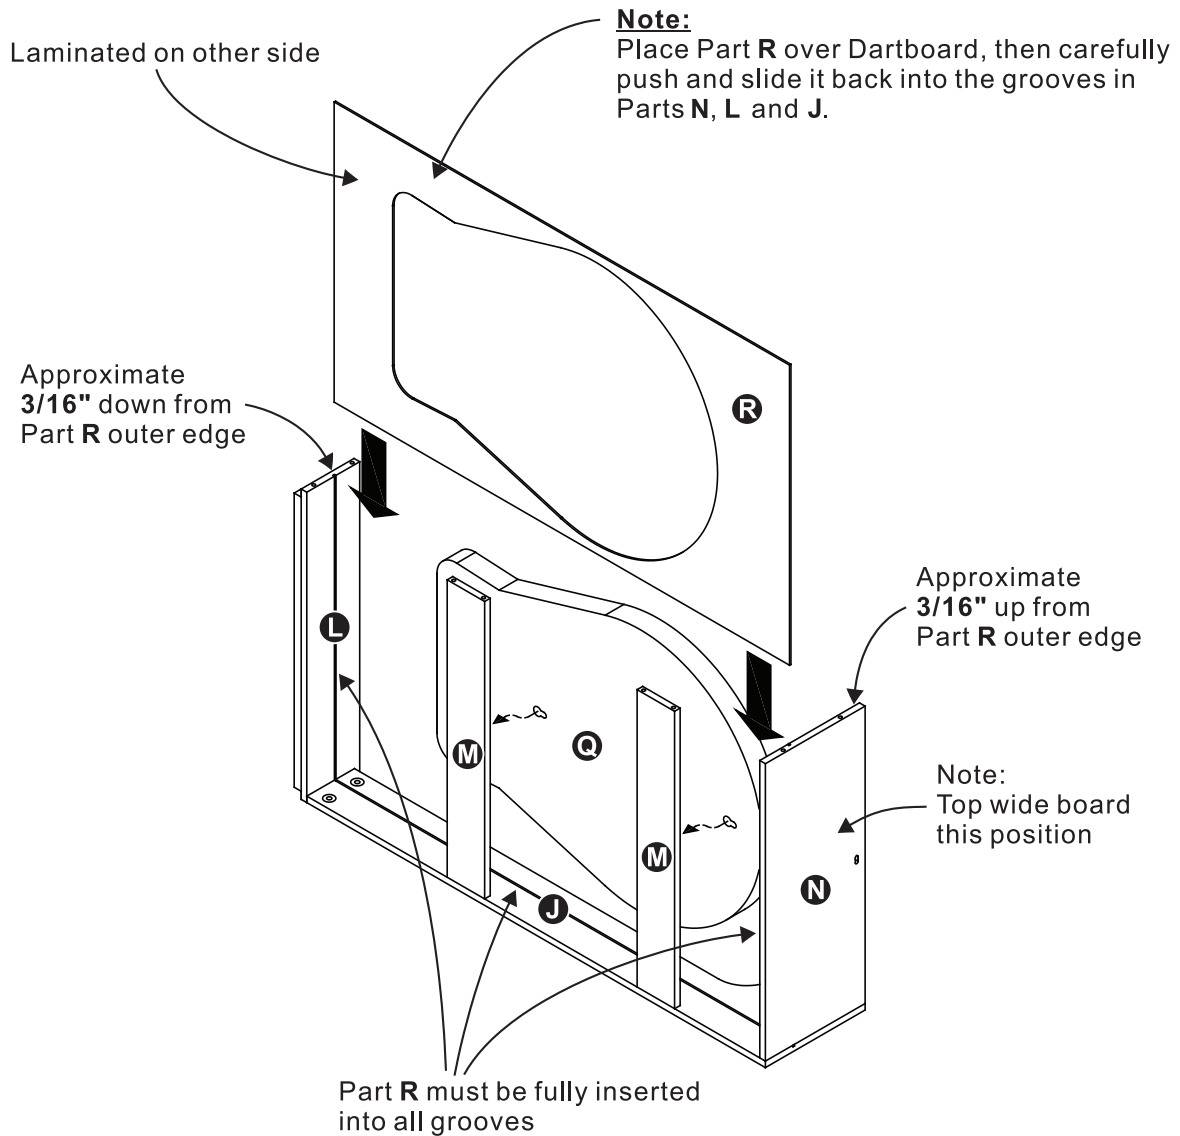


**Important note:**  
Groove from Parts **J**, **N** & **L** must be align before slide Part **R** into groove.


**Figure 3**



 6. Attach Part **K** to partially assembled Upper Cabinet using Phillips Flat Head Bolts (**H1**) and Wood Dowel Pins (**H4**). See **Figure 4**. Tighten, but do Not over tighten or strip out **H1** Bolts.

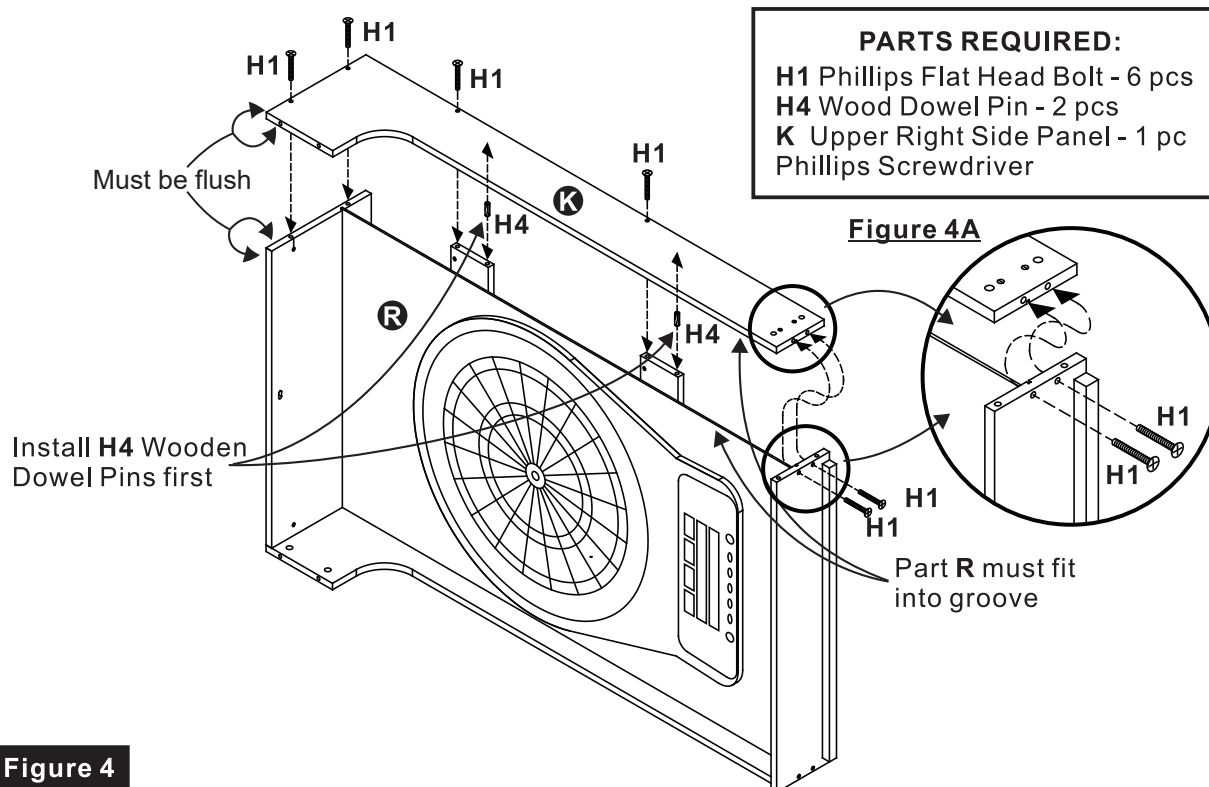


 7. Screw 4 pcs Panel Bolts (**H2**) into Factory Installed Inserts on Part **P**. Tighten, but do NOT over tighten or strip out **H2** Bolts.
8. Insert 4 pcs Panel Bolt Locks (**H3**) into holes on Parts **J** and **K**. Make sure the opening on the Panel Bolt Locks (**H3**) points upward. See **Figure 5A**
9. Attach Part **P** to Parts **J** and **K**. Tighten Panel Bolt Locks (**H3**) with a Phillips Screwdriver. See **Figure 5B**.

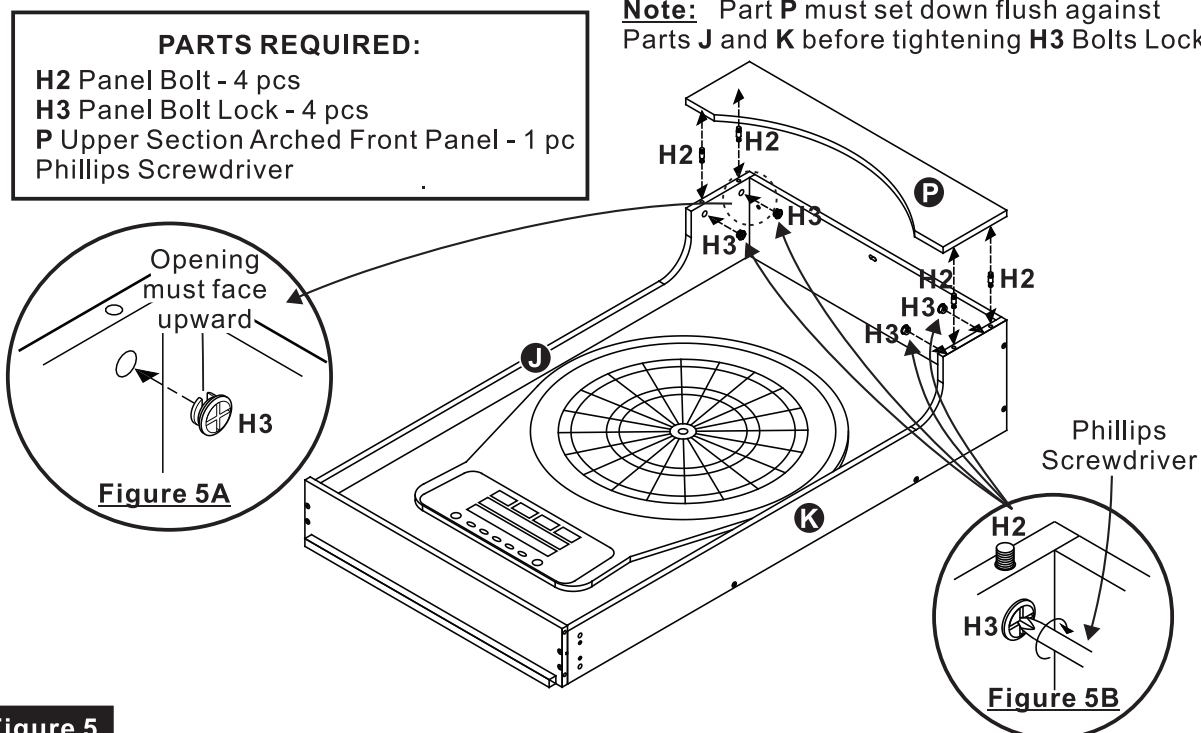




10. Attach Part **S** to back of assembled Upper Cabinet using Phillips Round Head Screw (**H9**). See **Figure 6**. Tighten, but do Not over tighten or strip out **H9** Screws.

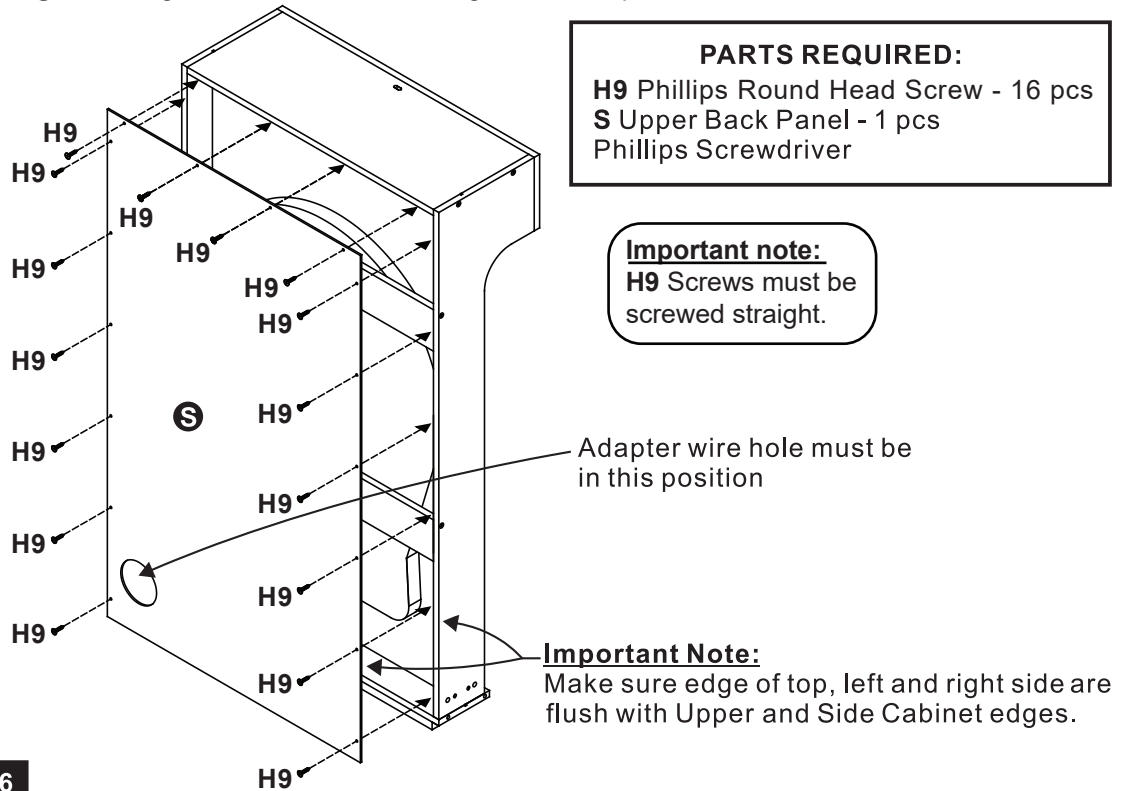 

11. Attach Parts **C** to Part **A** using 4 pcs Phillips Flat Head Bolt (**H1**). See **Figure 7**. Tighten, but do Not over tighten or strip out **H1** Bolts.
12. Insert Wood Dowel Pins (**H4**) into pre-drilled holes on Parts **D**. Attach Parts **D** to Part **A**. See **Figure 7**.

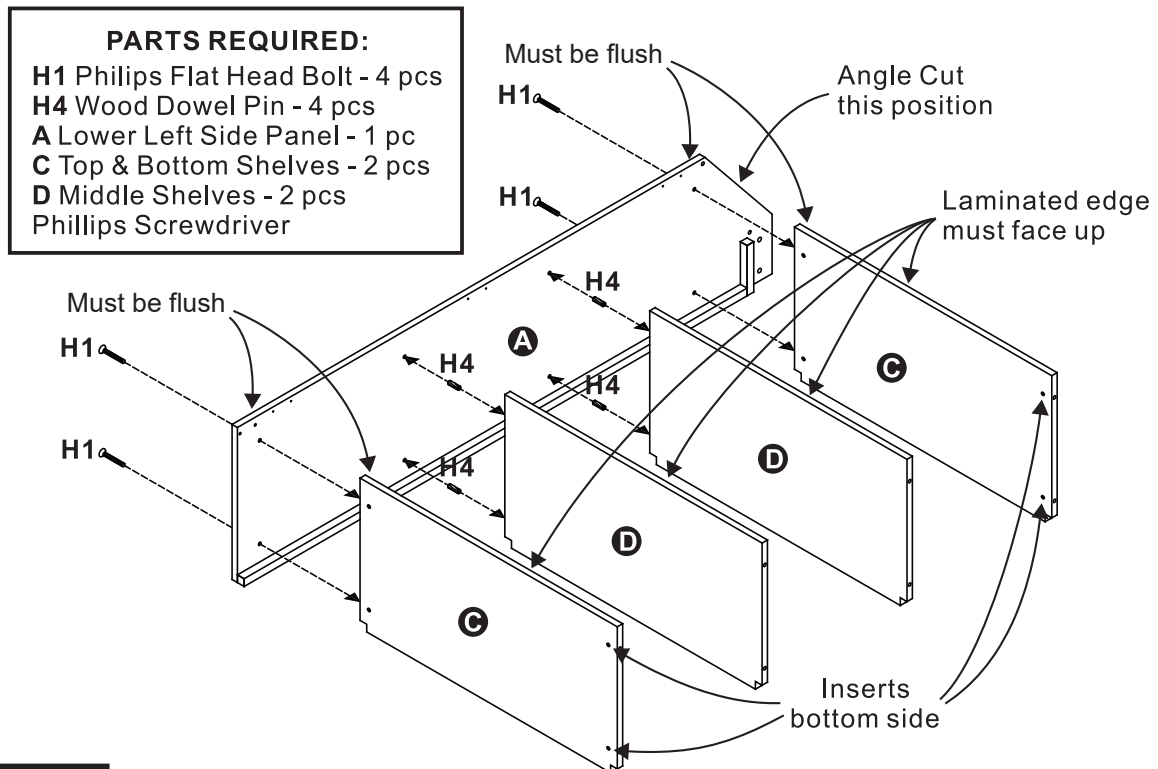 




13. Install 4 pcs Wood Dowel Pins (**H4**) into Part **E**. Attach Part **E** to **A**. See **Figure 8**.
14. Install 4 pcs Wood Dowel Pins (**H4**) into 2 pcs Part **D**.
15. Attach Part **B** to partially assembled Lower Cabinet using 4 pcs Phillips Flat Head Bolts (**H1**) to secure it to 2 pcs Part **C**.  
**Important Note: Do NOT tighten H1 Bolts at this time.**
16. Attach Part **T** to Lower Cabinet using 2 pcs Pivot Pins (**H7**).
17. Fully tighten but do Not over tighten or strip out **H1** Bolts.

**PARTS REQUIRED:**

**H1** Phillips Flat Head Bolt - 4 pcs  
**H4** Wood Dowel Pin - 8 pcs  
**H7** Pivot Pins - 2 pcs  
**B** Lower Right Side Panel - 1 pc  
**E** Base Cross Panel - 1 pc  
**T** Tilt-Down Door Panel - 1 pc  
 Phillips Screwdriver

**Important note:**

This step requires help from another adult.

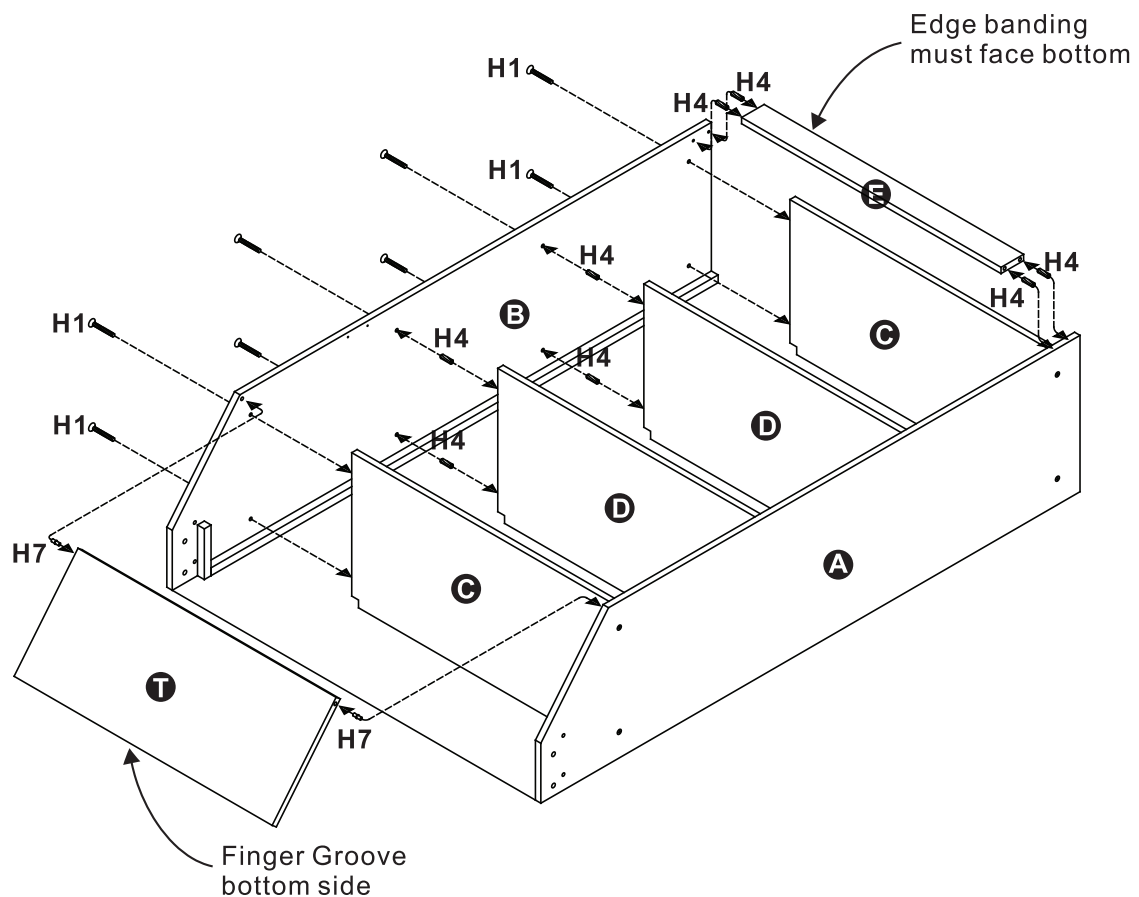 


**Figure 8**



18. Attach Door Magnet (**H10**) to Part **B** using Phillips Round Head Screws (**H9**). See **Figure 9**.
19. Attach Door Magnet Attachment (**H11**) to Part **G** using 2 pcs Phillips Flat Head Screw (**H12**).
20. Attach 3 pcs Door Hinges (**H8**) to Part **G** using 6 pcs Phillips Round Head Screws (**H9**) and 3 pcs Phillips Flat Head Screws (**H12**). See **Figure 9A**.
21. **Note: With help from another adult,** attach Part **G** to Part **A** using 6 pcs Phillips Round Head Screws (**H9**) for each hinges. See **Figure 9A**.

**Note:** Tighten all screws, but do Not over tighten or strip the screws.

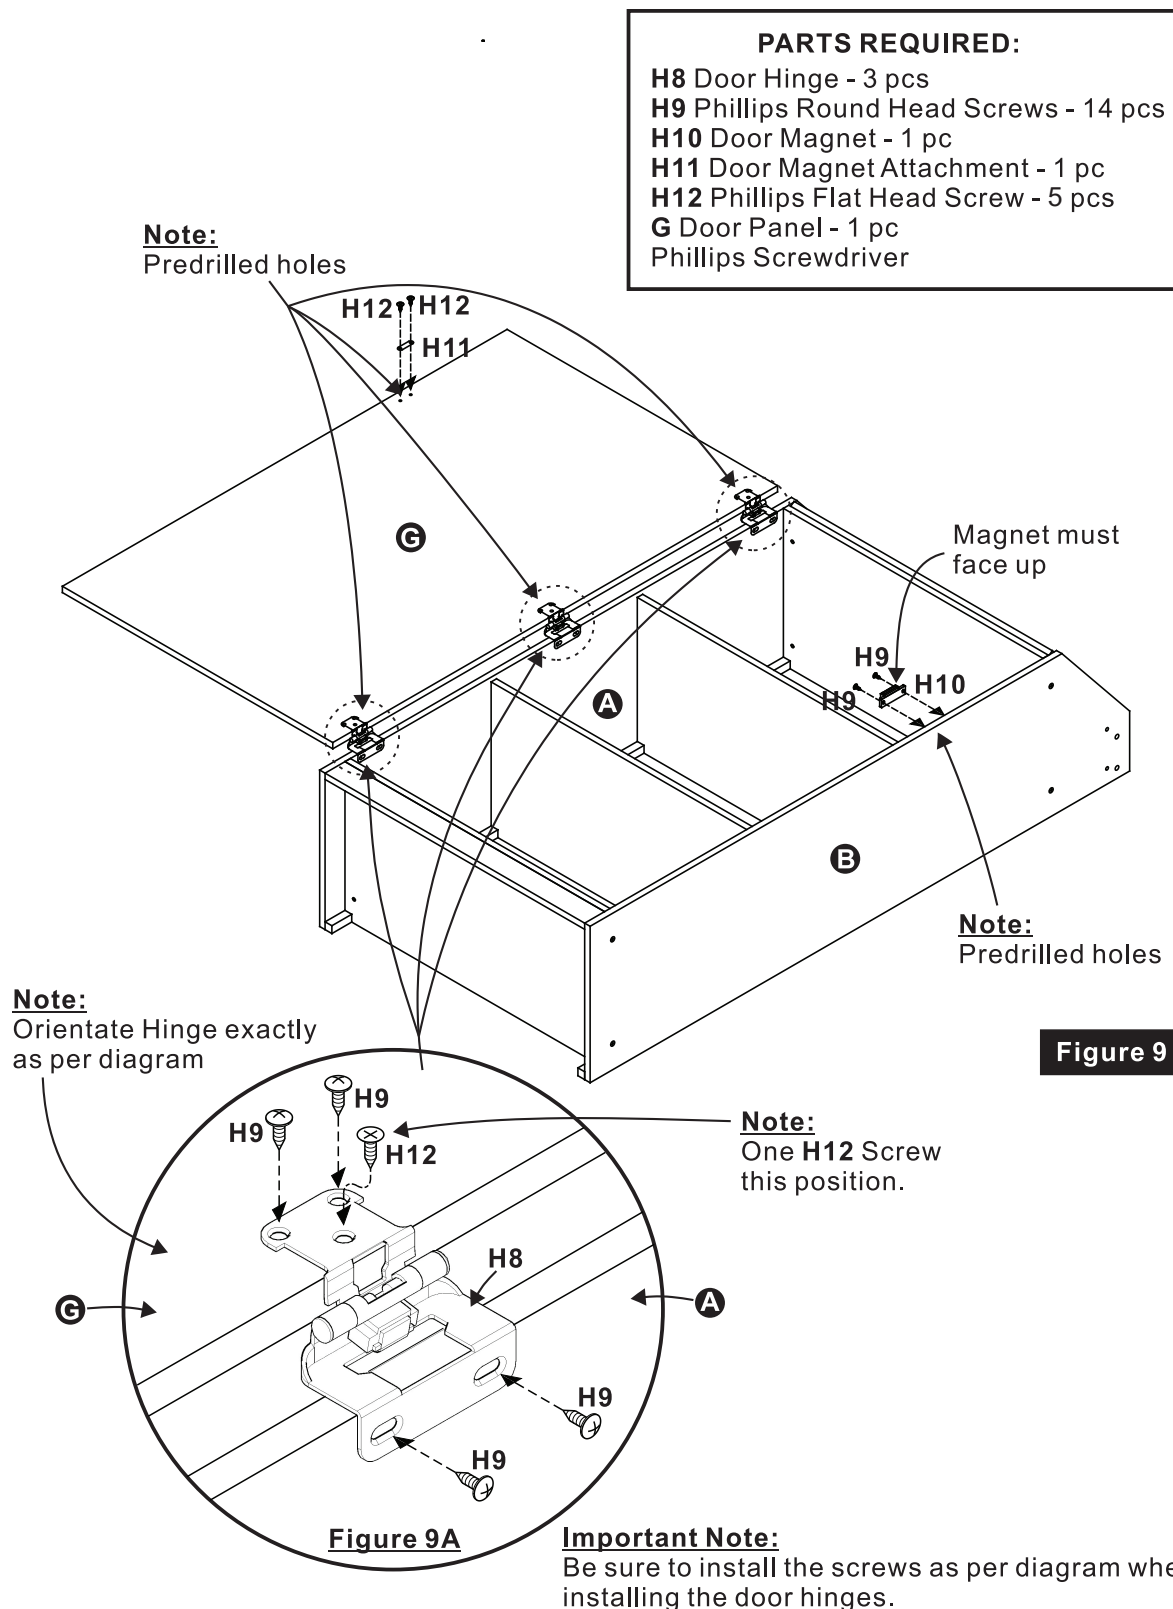 

**Figure 9**




22. **Note: with help from another adult.**

Attach Upper Cabinet Assembly to Lower Cabinet Assembly using 4 pcs Allen Head Bolts (H13), 4 pcs Flat Washer (H14) and 4 pcs Phillips Flat Head Bolts (H1)  
See **Figure 10**. Tighten, but do Not over tighten or strip our H14 & H1 Bolts.

**PARTS REQUIRED:**

H1 Phillips Flat Head Bolt - 4 pcs  
H13 Allen Head Bolt - 4 pcs  
H14 - Flat Washer - 4 pcs  
Phillips Screwdriver

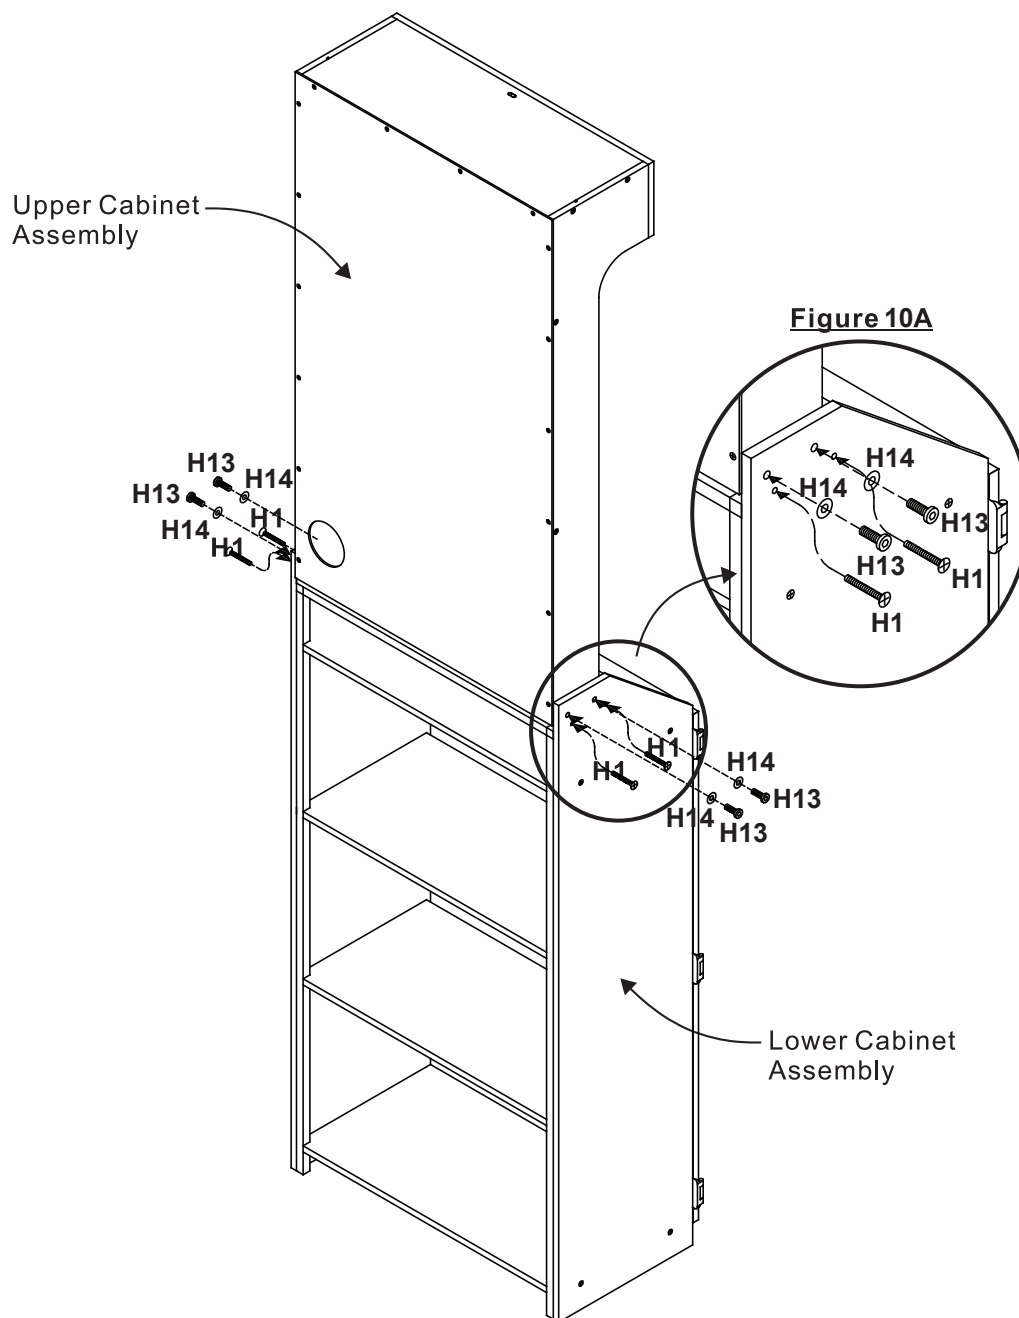 

**Figure 10**







# **PRODUCT PART LIST**

## **E800FS1010**

<b>Ref</b>	<b>Part#</b>	<b>Description</b>	<b>Qty</b>
A	E800FS1010-A	Lower Left Side Panel	1
B	E800FS1010-B	Lower Right Side Panel	1
C	E800FS1010-C	Top & Bottom Shelves	2
D	E800FS1010-D	Middle Shelves	2
E	E800FS1010-E	Base Cross Panel	1
F	E800FS1010-F	Lower Back Cover	1
G	E800FS1010-G	Door Panel	1
J	E800FS1010-J	Upper Left Side Panel	1
K	E800FS1010-K	Upper Right Side Panel	1
L	E800FS1010-L	Upper Section Bottom Panel	1
M	E800FS1010-M	Dartboard Anchor Panel	2
N	E800FS1010-N	Upper Panel	1
P	E800FS1010-P	Upper Section Arched Front Panel	1
Q	E800FS1010-Q	Dartboard	1
R	E800FS1010-R	Front Baffle Panel	1
S	E800FS1010-S	Upper Back Cover	1
T	E800FS1010-T	Tilt-Down Door Panel	1
H1	E800FS1010-H1	40 x 5mm – Phillips Flat Head Bolt	24
H2	E800FS1010-H2	25 x 6mm – Panel Bolt	4
H3	E800FS1010-H3	Panel Bolt Lock	4
H4	E800FS1010-H4	20 x 6mm – Wood Dowel Pin	16
H5	E800FS1010-H5	18 x 6mm – Allen Head Bolt	2
H7	E800FS1010-H7	16 x 5mm – Pivot Pin	2
H8	E800FS1010-H8	Door Hinge	3
H9	E800FS1010-H9	10 x 3.5mm – Phillips Round Head Screw	56
H10	E800FS1010-H10	Door Magnet	1
H11	E800FS1010-H11	Door Magnet Attachment	1
H12	E800FS1010-H12	10 x 3.5mm – Phillips Flat Head Screw	5
H13	E800FS1010-H13	25 x 8mm – Allen Head Bolt	4
H14	E800FS1010-H14	8 x 19mm – Flat Washer	4
H15	E800FS1010-H15	Allen Wrench	1
H16	E800FS1010-H16	Hardware Kit	1



## **LIMITED WARRANTY**

Escalade®Sports (the Company) warrants the Product to be free from defects in workmanship and materials under normal use and conditions **FOR A PERIOD OF 90 DAYS FROM THE DATE OF ORIGINAL PURCHASE** in the United States and Canada.

### **Product Registration Card**

The Product Registration Card must be filled out completely and mailed to the Company at the address printed on the card within 10 days from the date of your purchase of the Product.

### **What Is Covered**

Except as provided below, this Limited Warranty covers all defects in materials and workmanship. This Limited Warranty is void if the Product is:

- Damaged through improper usage, negligence, misuse, abuse, transportation damage, acts of nature, or accident (including failure to follow the instructions supplied with the Product)
- Used in commercial applications or rentals
- Modified or repaired by anyone not authorized by the Company

### **What Is Not Covered**

This Limited Warranty does not cover:

- Any expendable items such as batteries, light bulbs, fuses, accessories, cosmetic parts, tools and other items that wear out.
- due to normal usage. Any costs you may incur for delivery, installation, assembly or transport of your product.

### **What The Company Will Pay For**

If during the Limited Warranty period, any part or component of the Product is found by the Company to be defective, the Company will, at its option, repair the Product, replace the Product with a new Product (either the same or an equivalent model) or cause the original retailer of the Product to exchange the Product with a new Product (either the same or an equivalent model) or refund the original purchase price of the Product, without charge for labor or parts. The Company's obligation to repair, replace or exchange the Product, however, shall be limited to the amount of the original purchase price of the Product.

### **How To Obtain Warranty Service**

In order to enforce your rights under this Limited Warranty, you must follow these procedures:

- You must have completed and mailed the Product Registration Card to the Company within 10 days of purchase of the Product.
- You must include THE ORIGINAL COPY OF YOUR SALES RECEIPT.
- You must call the Company's Consumer Service Department at 1-800-526-0451 from 9:00 A.M. to 5:00 P.M. (EST) to notify the Company of the nature of the problem.
- If you are instructed to return the Product to the Company for servicing, you are responsible for shipping the Product, at your expense, to the address designated by the Company in packaging that will protect against further damage.
- You must also include your name, address, daytime telephone number, model number of the Product and a description of the problem.

**THIS LIMITED WARRANTY IS AVAILABLE ONLY TO THE ORIGINAL PURCHASER OF THE PRODUCT AND IS VALID IN THE UNITED STATES AND CANADA ONLY.**

THE COMPANY'S LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT, AT ITS OPTION, OF ANY **DEFECTIVE PRODUCT AND SHALL NOT INCLUDE ANY LIABILITY FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND.**

**THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR DO NOT ALLOW FOR EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. TO THAT EXTENT, THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.**

This Limited Warranty gives you specific legal rights, but you may also have other rights that vary from state to state. If you have questions regarding this Limited Warranty or the operation of the Product, you may call or write us:

**Consumer Service Department  
817 Maxwell Ave.  
Evansville, IN 47711  
1-800-526-0451  
[www.escaladesports.com](http://www.escaladesports.com)**







NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

"CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."



The ARACHNID trademark is a registered trademark owned by Arachnid 360 LLC and used by Escalade Sports pursuant to license