

We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

# 1-888-996-2729 FAX: 1-866-873-3531 gameroom@escaladesports.com

Or write to: Escalade Sports Customer Service Department P.O. Box 889 Evansville IN 47706

Please visit our Web site at:

www.escaladesports.com

Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable) and part number if requesting a replacement part. These numbers are located on the product, packaging, and this owners manual.

Your Model Number <u>G05305W/F</u>

Date Code <u>2-G05305W- -FS</u>

Purchase Date \_\_\_\_\_

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

All Rights Reserved. © 2020 Escalade Sports **IMPORTANT!** READ EACH STEP IN THIS MANUAL BEFORE YOU BEGIN THE ASSSEMBLY.

#### **IMPORTANT!**

THE DRAWINGS IN THIS MANUAL MAY BE EXAGGERATED OR MODI TO SHOW DETAILS.

## TWO ADULTS ARE REQUIRED TO ASSEMBLE THIS 3 IN 1 HOCKEY, TABLE TENNIS, DINING TABLE

Tools Required: Allen Wrench T1 Included with the Hardware Kit Furniture Polish and Soft Cloth Carpenters Level

An electric screwdriver is helpful in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.

## Assembly Tips

 
Make sure you understand the following tips before you begin to assemble your 3in1 hockey table.

- 1. Start all bolts by hand before tightening.
- 2. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.



## HARDWARE IDENTIFIER

#### (To Scale) HARDWARE KIT IS PACKED INSIDE OF CARTON A



**H2** = 48 pcs 5/16" x 1-3/8" Allen Head Bolt



**H3** = 64 pcs 5/16"x 3/4" Flat Washer




**H4** = 64 pcs 5/16" x 1/2" Lock Washer (Not to Scale)

**T1** = 1 pc Allen Wrench


## PARTS IDENTIFIER

 (Not To Scale)




**P1** = 1 pc Main Table Cabinet


#### PACKED INSIDE OF CARTON A

 

 P2 = 1 pc A Table Tennis Top With Guide Pins Reverse Side is The Dinning Top PACKED INSIDE OF CARTON A




 P3 = 1 pc B Table Tennis Top With Guide Pin Holes Reverse Side is The Dinning Top PACKED INSIDE OF CARTON A



**P4** = 4 pcs Table Leg

 PACKED INSIDE OF CARTON B




**P5** = 2 pcs Bench Seat

PACKED INSIDE OF CARTON B



 P6 = 4 pcs Bench Leg PACKED INSIDE OF CARTON A




P7= 4 pcs Bench Support (Packed inside P5 Bench Seats)

PACKED INSIDE OF CARTON B

## ACCESSORIES IDENTIFIER

 (Not To Scale)



A1= 1 pc Table Tennis Net





**A4**= 2 pcs Table Tennis Ball

PACKED INSIDE OF CARTON A



A7 = 2 pcs Table Tennis Playfield Support (Packed underneath the playfield) PACKED INSIDE OF CARTON A

 


**A2**= 2 pcs Table Tennis Net Post





A5= 4 pcs Striker PACKED INSIDE OF CARTON A




**A3**= 2 pcs Table Tennis Paddle

PACKED INSIDE OF CARTON A



 A6= 4 pcs Puck PACKED INSIDE OF CARTON A




A8 = 2 pcs Bench Carpet (Packed inside P5 Bench Seats)

PACKED INSIDE OF CARTON B

### 3 IN 1 HOCKEY, TABLE TENNIS, DINING TABLE Parts List

(Not To Scale)

All items are packaged in larger Carton A, except, P4, P5, P7, and A8 are packaged in smaller Carton B.

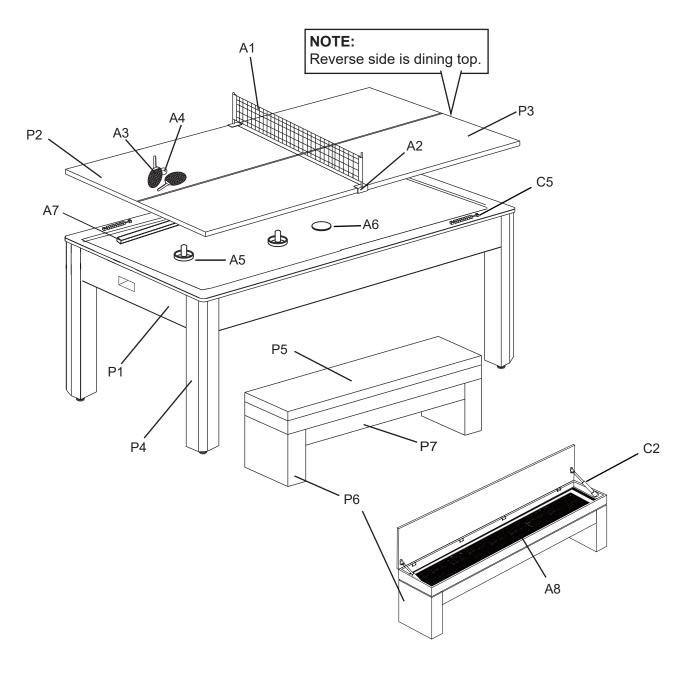


PARTS REQUIRED16pcs - H1 Allen Head Bolt1pc - P1 Main Table Cabinet16pcs - H3 Flat Washer4pcs - P4 Table Leg16pcs - H4 Lock Washer1pc - T1 Allen Wrench


#### STEP 1:

Attach **P4** Legs onto the Side Aprons and the End Aprons using **H1** Bolts, **H4** Lock Washers and **H3** Flat Washers as shown in **FIGURE 1**.

Use T1 Allen Wrench to tighten all **H1** bolts.

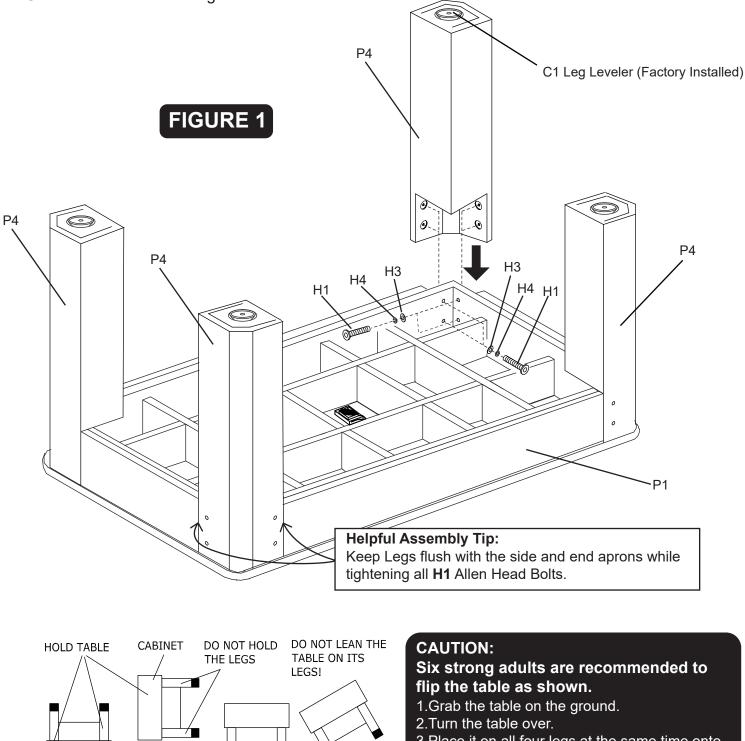

3.Place it on all four legs at the same time onto the floor.

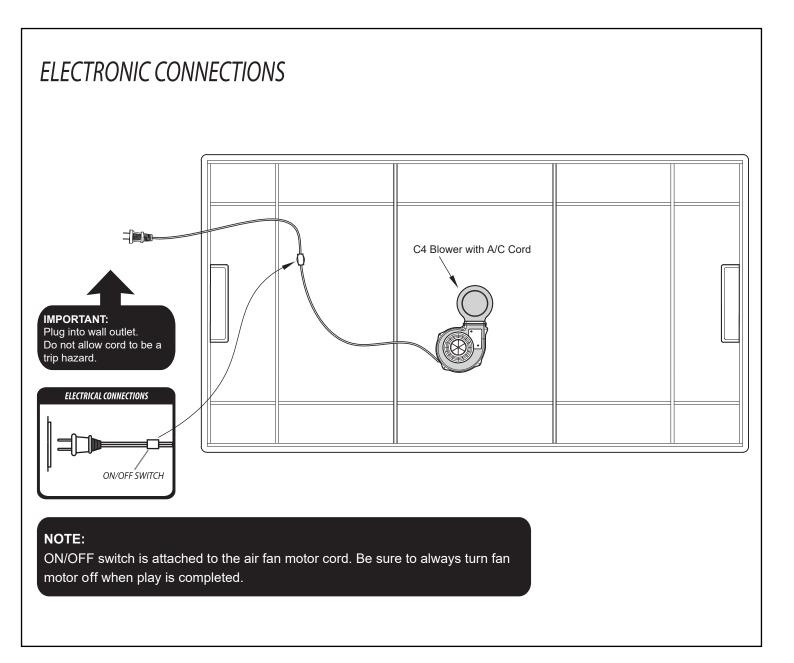


#### PARTS REQUIRED

- 1pc **P2** A Table Tennis Top With Guide Pins
- 1pc **P3** B Table Tennis Top With Guide Pin Holes
- 1pc A1 Table Tennis Net
- 2pcs A2 Net Post

#### 2pcs - A7 Table Tennis Playfield Support

#### STEP 2:

Using the guide pins carefully connect the **P2** A Table Tennis Top With Guide Pins to **P3** B Table Tennis Top With Guide Pin Holes as shown in **DETAIL A**. Place **A7** Table Tennis Playfield Supports between Table Tennis Top and Air Hockey table. Install **A1** Table Tennis Net by adjusting **A2** Net Post as shown in **DETAIL B & FIGURE 2**.

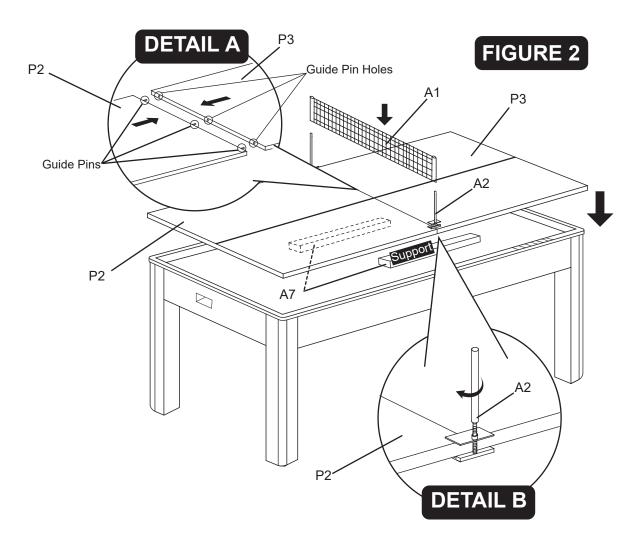

## NOTE:


Using Dining Top:

Remove Table Tennis Net and Net posts. Carefully separate the two playfield halves, flip the halves and push halves together using the guide pins and guide pin holes in each half top.

#### PARTS REQUIRED 48pcs - H2 Allen Head Bolt 48pcs - H3 Flat Washer 48pcs - H4 Lock Washer 4pcs - P6 Bench Leg 4pcs - P7 Bench Support 2pcs - P5 Bench Seat 2pcs - A8 Bench Carpet

#### STEP 3:

Attach **P6** Bench Legs to **P7** Bench Supports using **H2** Allen Head Bolts, **H3** Flat Washers and **H4** Lock Washers as shown in **FIGURE 3**. Tighten all **H2** Allen Head Bolts.

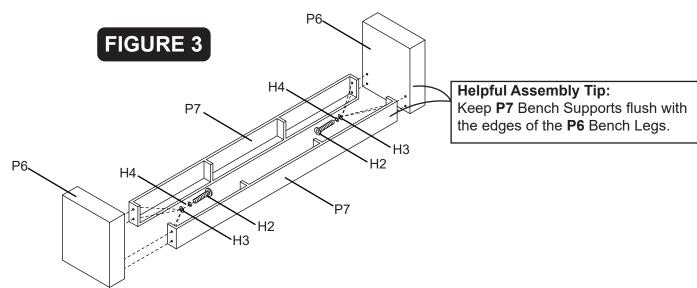

#### STEP 4:


Firstly, take the **A8** Bench Carpets out from the **P5** Bench Seats. Attach **P5** Bench Seat to the Leg assembly using **H2** Allen Head Bolts, **H3** Flat Washers and **H4** Lock Washers as shown in **FIGURE 4**.

FIGURE 4. FIGURE 4 H<sup>2</sup> H<sup>2</sup> H<sup>4</sup> H<sup>3</sup> H<sup>4</sup> H<sup>5</sup> H<sup>4</sup> H<sup>3</sup> H<sup>4</sup> H<sup>5</sup> H<sup>5</sup>

All Rights Reserved. © 2020 Escalade Sports

#### STEP 6:

Install the **A8** Bench Carpet into each bench as shown in **FIGURE 6**.

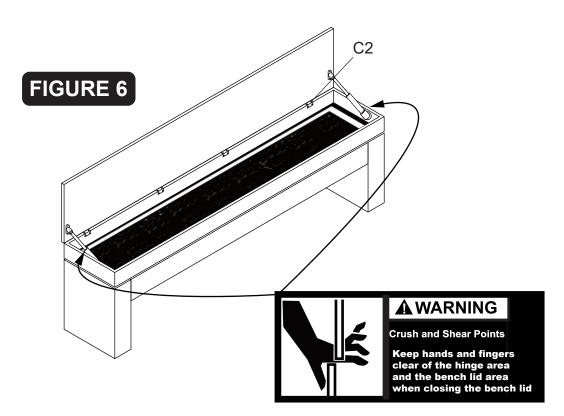

#### WARNING:

To prevent injury, exercise caution when opening and closing the bench lid. DO NOT let bench lid drop shut. DO NOT let children operate bench lid. Be cautious when moving bench on floor, Lift bench ends to move. DO NOT STAND ON BENCH SEAT. Congratulations! You have now assembled your 3 in1 hockey table. Please note the Care and Use instructions below to insure many years of trouble free use of your 3 in1 hockey table.

## CARE AND USE OF YOUR TABLE

- 1. Use spray furniture polish to clean all exterior surfaces of your hockey table and the playfield with the air motor fan running.
- 2. Use only a slightly damp soft cloth to clean the table tennis top (do not use Furniture Polish)
- 3. This product is intended for **INDOOR** use only .
- 4. **DO NOT** sit, climb or lean on the table.
- 5. **DO NOT** drag the table when moving it. This will damage the legs.
- 6. **DO NOT** set drinks on the table.

7. The purchase of a table cover will both protect and help keep clean the entire top of the table.

8. Lastly, using a carpenters level and the leg levelers, level table for best play.

Part#	Description	Qty	Part#	Description	Qty
H1	5/16" x 1-1/4" Allen Head Bolt	16	A1	Table Tennis Net	1
H2	5/16" x 1-3/8" Allen Head Bolt	48	A2	Net Post	2
H3	5/16" x 3/4"Flat Washer	64	A3	Table Tennis Paddle	2
H4	5/16" x 1/2" Lock Washer	64	A4	Table Tennis Ball	2
T1	Allen Wrench	1	A5	Striker	4
P1	Main Table Cabinet	1	A6	Puck	4
P2	"A" Table Tennis Top With	1	A7	Table Tennis Playfield Support	1
	Guide Pins		A8	Bench Carpet	1
P3	"B" Table Tennis Top With	1	C1	Leg Leveler (Factory Installed)	4
	Guide Pin Holes		C2	Dampener Piston (Factory Installed)	4
P4	Table Leg	4	C3	1/2" Phillips Head Hinge Screw (Factory Installed)	48
P5	Bench Seat Assembly	2	C4	Blower with A/C Cord	1
P6	Bench Leg	4	C5	Manual Scorer (Factory Installed)	2
P7	Bench Support	4	K1	Hardware Kit	1
			M1	Instruction Manual	1

## PRODUCT PARTS LISTS

### 90 DAY LIMITED WARRANTY

This customer warranty extends to the original owner, on the purchase of any ESCALADE SPORTS Product (hereinafter referred as the "Product").

**WARRANTY DURATION:** This Product is warranted to the original owner, for a period of 90 days from the original purchase.

**WARRANTY COVERAGE:** ESCALADE SPORTS warrants to the original owner, this product to be free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

**WARRANTY REPLACEMENT:** During the above 90 day warranty period, ESCALADE SPORTS shall provide replacement components or replace with a comparable product at our choosing. If product is defective under normal use and proper care, please contact our Customer Service Dept.

1-866-556-2757 / Customer Service Dept. Or Write us at: Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706 Attn: Customer Service Dept. Or E-mail us at: customerservice@escaladesports.com

Other than shipping requirements no charge will be made for such replacement of in-warranty Products.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

**LEGAL REMEDIES:** This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.